

Substrate and Mirror Preparation

- 1** Read instructions **completely** before applying QwikSet Mirro-Mastic®.

- 2** Do not use on acrylic mirror, vinyl safety backing, a painted surface, wall covering, or treated wood.



- 3** For best adhesion, the mirror, substrate and mastic should be at room temperature (72°F/22°C). Do not apply at a temperature below 59°F (15°C) or above 95°F (35°C).

- 4** Make sure mirror and substrate are free of dust, clean and dry. On nonporous substrates such as glass, tile or metal, sealing is not necessary. On porous substrates such as drywall or wood, use a quality primer (**not paint**) and allow it to dry. Painted surfaces should be sanded through to the original surface and the substrate cleaned and sealed where the mastic is to be applied. Wall coverings should be removed and the substrate cleaned and sealed where the mastic is to be applied.

- 5** **PERMANENT MECHANICAL FASTENERS MUST BE USED FOR ALL MIRROR APPLICATIONS.**

Directions for use of Palmer QwikSet Mirro-Mastic®

- 1** Apply QwikSet to the mirror or substrate in vertical beads or mounds. Do not apply mastic too close to the edge to prevent “squeeze out.” Place the beads or mounds so space will be left between them when the mirror is installed. Each vertical bead should be approximately ½ inch (1.3 cm) in width with a minimum of one bead every foot (30.5 cm). Each mound of QwikSet should be approximately 1½ inches (3.8 cm) in diameter with a minimum of one mound for every square foot (.0929 square meters) of mirror.

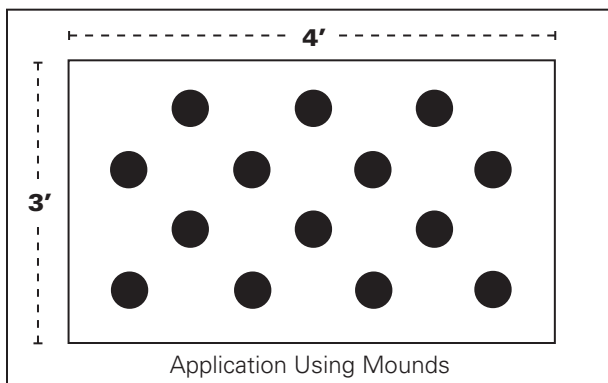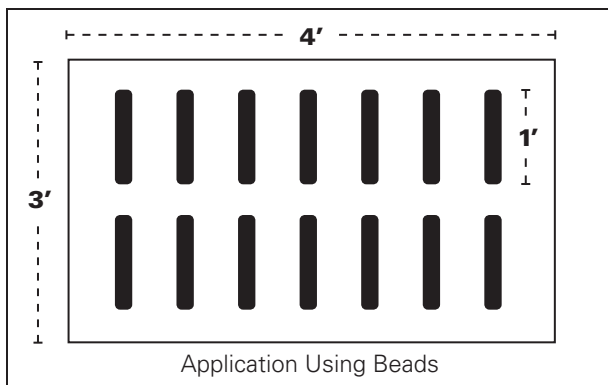

- 2** Press mirror firmly in place making good contact between mirror, mastic and substrate. Each vertical bead should spread to approximately 2 inches (5 cm) in width and each mound should spread to a pat approximately 3½ inches (8.9 cm) in diameter. The mastic needs air circulation to cure properly. At room temperature, QwikSet will cure to approximately 80% strength in 48 hours. Curing time will depend on temperature, humidity, type of substrate and amount of air that can reach the mastic.

- 3** With minimum coverage, one 10.1 fl oz (300 ml) cartridge of QwikSet will install approximately 20 square feet (1.9 square meters) of mirror.

- 4** Cleanup can be done with mineral spirits.

- 5** For ceiling applications or technical questions, contact Palmer Products at 800.431.6151 or palmer@mirro-mastic.com. The SDS and directions in French and Spanish are available at mirro-mastic.com.

NOTE: Palmer Products makes no warranties, express or implied, with respect to QwikSet Mirro-Mastic® or otherwise, and hereby disclaims any and all warranties, including, without limitation, any implied warranty of merchantability or fitness for a particular purpose. Palmer Products’ sole liability and the customer’s sole and exclusive remedy with respect to any claim arising out of or relating to either QwikSet Mirro-Mastic® or the use of QwikSet Mirro-Mastic®, shall be the replacement of the QwikSet Mirro-Mastic®. Palmer Products assumes no responsibility if the product is misused.